

# 3 LAMINAR FLOW PLATE "LFP" (Patent Pending) MOUNTING KIT & INSTRUCTIONS

Make sure mounting areas are clean. Read "GMIA"

<b>Kit Includes:</b>	<b>Qty.</b>	<b>Extra</b>
Laminar Flow Plate "LFP" (Patent Pending)	1	0
Dual-Lok Mated Sets (1/2" x 1")	3	1
Clear Bump On	1	1
Alcohol Pad	1	0

To remove "LFP" for cleaning: (1) Remove bottom 2 windscreen to bracket mounting screws and rotate windscreen back. (2) Grasp both sides of "LFP" mounting lip and jerk up sharply to disengage Dual-Lok. (3) Slide "LFP" retaining arms up and off Support Bar and slide "LFP" from under screen.

To reattach "LFP": Slide retaining arms over Support Bar, line up Dual-Lok at mounting lip and dash, press Dual-Lok together until engagement is heard or felt.

**Requires Masking Tape to mark mounting locations**

# LAMINAR FLOW PLATE MOUNTING INSTRUCTIONS


*Notes: (1) "Dash" is painted fairing panel between back of instruments and top of headlight. (2) Laminar Flow Plate "LFP" Dual-Lok mounting attachments also act as "Hinges". Hold "LFP" to dash, yet allow "LFP" to adjust when screen is raised and lowered.*

## **Mounting:**


1. Measure up 1" from bottom/center of "hump" in dash. See Fig's. "A" & "B". Clean Bump-On mounting location with alcohol pad and wipe dry with clean cloth. Attach Bump-On to dash.
2. Clean underside of "LFP" mounting lip with alcohol pad and wipe dry. Measure and mark Dual-Lok mounting locations as shown in Fig. "C". Attach clear half of Dual-Lok to mounting lip, as shown. Press firmly in place to seat adhesive.
3. Raise stock, lower pivot arms to "Full-Up Position". Lower upper pivot arms until "Bracket-Stops" rest on fairing support arm covers.
4. Study Fig's. "D" & "E" for correct positioning of "LFP". Slide "LFP" retaining arms over upper brackets support bar. Line up "LFP" mounting lip tips and mark positions with tape as shown in Fig. "E".
5. Clean Dual-Lok mounting area on dash with alcohol pad and wipe dry. Remove backing from Dual-Lok, line up "LFP" mounting lip as shown and press mounting lip to dash. Press firmly on mounting lip at each Dual-Lok location to seat adhesive.

# LAMINAR FLOW PLATE ("LFP")


## (A) MOUNTED "LFP": UP POSITION / SIDE-VIEW FROM CURVED-SIDE

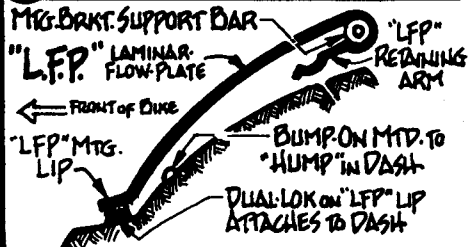

## (B) ATTACH BUMP-ON TO DASH:

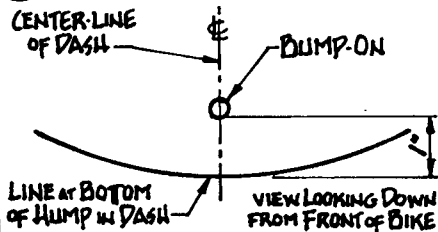


## (C) MOUNT DUAL-LOK TO UNDER-SIDE OF "LFP" MOUNTING LIP

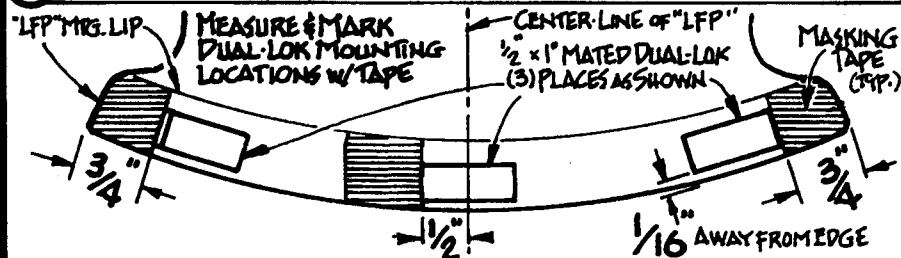

# The Self Adjusting Laminar Flow Plate

**D** RETAINING  
ARMS SLIDE  
OVER BRACKET  
SUPPORT BAR

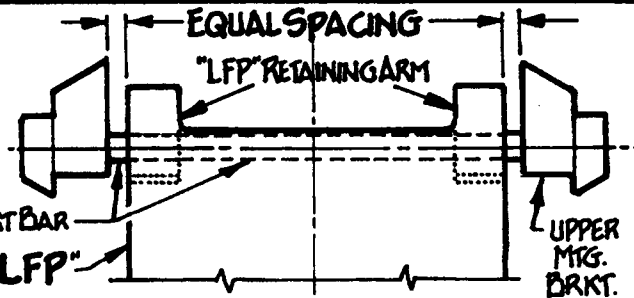

**E** LINE-UP TIPS  
OF SILVER FAIRING  
SUPPORT ARM COVERS  
AND  
"LFP" MOUNTING LIP..

PRESS FIRMLY ON LIP AT  
DUAL-LOK MTG. LOC'S.

