

4

AEROSCREEN - TO - BRACKETS MOUNTING KIT & INSTRUCTIONS

Note: A second person is helpful in holding windscreen

Kit Includes:	Qty.	Extra
Stainless Steel Mounting Screw	4	0
Stainless Steel Washer	8	1
Rubber Washer	8	1
Large Bump On	4	1
Alcohol Pad	1	0


Requires 5/32" or 4mm Allen Wrench

WINDSCREEN TO BRACKET MOUNTING

MOUNT AEROSCREEN ALL BRACKETS DOWN, THEN MOUNT AT TOP BRACKETS. 1ST BUMP-ONS

MOUNTING
ALL BRACKETS

COMPONENTS
and MOUNTING
SEQUENCE

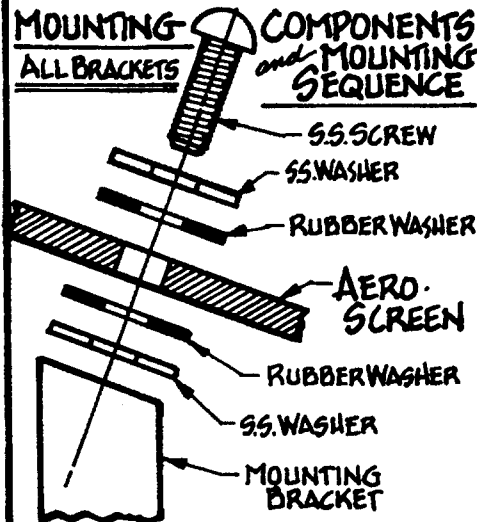


CAUTION: DO NOT USE LOX-TITE ON SCREENS

KIZGT/KIZRS OPTIONAL HAND-FLARE

SILVER FAIRING SUPPORT ARM COVER

SCREEN UP:
BUMP-ON ON
HAND FLARE

SCREEN DOWN:
BUMP-ON
ON FAIRING

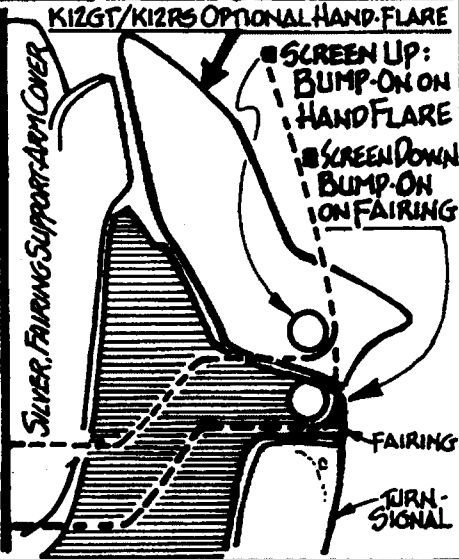

WINDSCREEN TO BRACKET MOUNTING INST.

NOTE: Never use a chemical thread locker (ie: "LocTite") on windscreen mounting screws. Fumes from curing will cause screen to shatter. Damage to screens due to use of chemical thread locker is not covered by warranty.

1. Lower top and bottom mounting arms/brackets: Remove tape from top of brackets just prior to attaching screen at each hole.
2. Rubber washers go against screen. Attach screen starting at top mounting brackets. Leave screws loose until screen is attached at all 4 holes.
3. Attach screen to bottom mounting brackets. Leave loose.
4. Snug-up bottom then top screws, then tighten additional one-sixteenth (1/16) turn.
5. Lower screen and place large Bump-Ons on fairing above turn signal under tips of screen. If you have BMW Hand-Guards, raise screen and mount Bump-Ons to Hand-Guards under fairing tips.