

Please read instructions and study illustrations (inside) before mounting.

Cleaning/Curing: Hydraulic reservoirs must be totally clean and dry before attaching Dual-Lok mounting strips. All traces of Armor-All protectant and brake fluid, dirt, etc. must be removed. Clean first with warm water and household detergent or "Simple-Green®," rinse and dry thoroughly. Then clean with alcohol pads and dry thoroughly.

Do not touch Dual-Lok adhesive after backing has been removed. Once Dual-Lok has been attached to component, it must be pressed on firmly to seat the adhesive. Optimum ambient mounting temperature is 70°F+. Dual-Lok Curing time is 50% in 30 minutes, 100% in 72 hours. In temperatures below 70°F, heat the control housing/mounting areas with a hair dryer for approximately 30 seconds before attaching Dual-Lok. Be sure to clean the mounting area thoroughly because Dual-Lok is not a warranty item. (See warranty returns on back page). Thank you for your purchase—Ride Safe!

Mtg. Kit Includes:	Mtg. Qty.	Extras
HandGards	1 Pair	0
1"w. x 2 1/4" Black Dual-Lok Strip	2 Pcs.	1
1"w. x 2 1/4" Clear Dual-Lok Strip	4 Pcs.	1
Large Bump-On with Dual-Lok attachment	2 Pcs.	0
1/2"w. x 1 1/2"L. Black, Dual-Lok Strip	2 Pcs.	1
3/4" Diameter Dual-Lok Button Clear	8 Pcs.	2
Decal	2	0
Alcohol Pad	2	0

Mounting:

Study the illustrations and trial fit the HandGards to determine the Dual-Lok mounting locations. Attach all Dual-Lok to the hydraulic reservoir / hand control assemblies as follows:

Components and placement—Top of control housing / Hydraulic reservoir:

1. Center (left to right & between hydraulic reservoir mounting screws) (1) 1" x 2 1/4" long black Dual-Lok strip on top of control housing / hydraulic reservoir. See top left illustration.

Leading edge of control housing:

1. Attach (1) Large Bump-On with Dual-Lok attachment according to the bottom left illustration.
2. Attach (1) 1/2" x 1 1/2" Dual-Lok strip against the edge of the Large Bump-On.
3. Attach (1) 3/4" diameter Clear Dual-Lok Button to front of Dual-Lok strip, DO NOT REMOVE THE ADHESIVE BACKING.

Underside of controls housing:

1. Attach (2) 3/4" diameter Black Dual-Lok Buttons one on either side of the raised "Boss" on underside of controls. See top right illustration.

Attach Dual-Lok Strips to mounting flanges:

1. Slide HandGard in place so it touches the Large Bump-On and Dual-Lok button on the leading edge of the control housing. Make sure front edge of top mounting flange is flush with edge of reservoir cap closest to you as you sit on the bike. Mark the location on the mounting flange with a felt-tip marker. (Marker comes off with alcohol)
2. Remove HandGard and attach Clear 1" x 2 1/4" Dual-Lok strip to underside of top mounting flange at marked position. See bottom right illustration.
3. Attach Clear 1" x 2 1/4" Dual-Lok strip to bottom mounting flange. Center the strip on and against front edge of mounting flange. See bottom right illustration.
4. Remove the adhesive cover from the 3/4" diameter Clear Dual-Lok Button on the leading edge of controls housing.


Final mounting:

Attach AeroFlow decal to top of HandGard to hide mounting strip. Slide HandGards in place. Press firmly on HandGard at clear Dual-Lok button on leading edge of controls to seat mounting adhesive. Then press on all Dual-Lok locations until engagement is heard or felt.


R1200C/AEROFLOW HANDGARDS: MOUNTING COMPONENTS and PLACEMENT

CLUTCH-SIDE SHOWN
IN ALL ILLUSTRATIONS


COMPONENTS and PLACEMENT

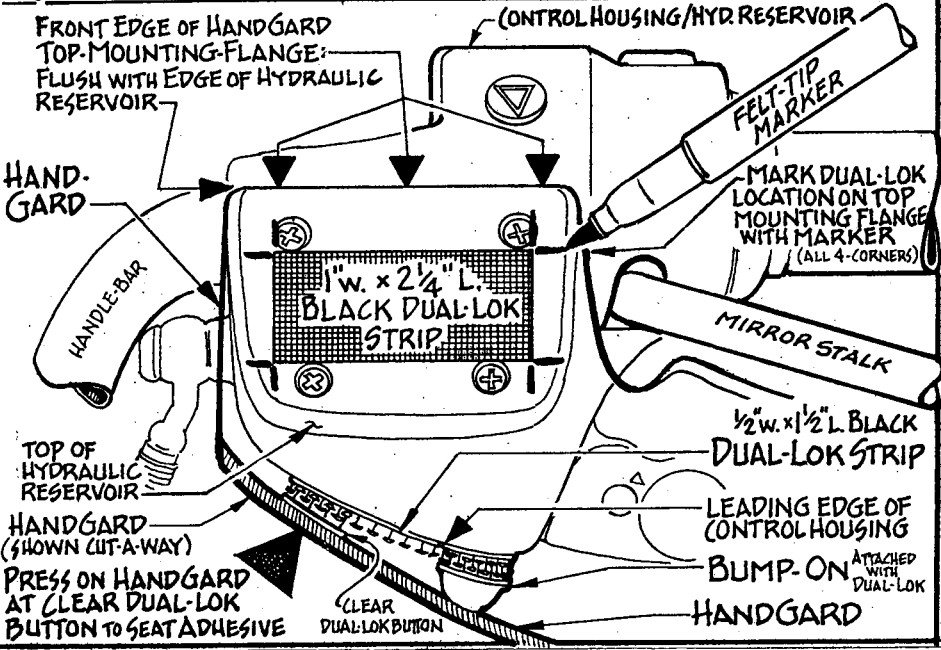

UNDER-SIDE OF CONTROLS HOUSING: CLUTCH-SIDE SHOWN

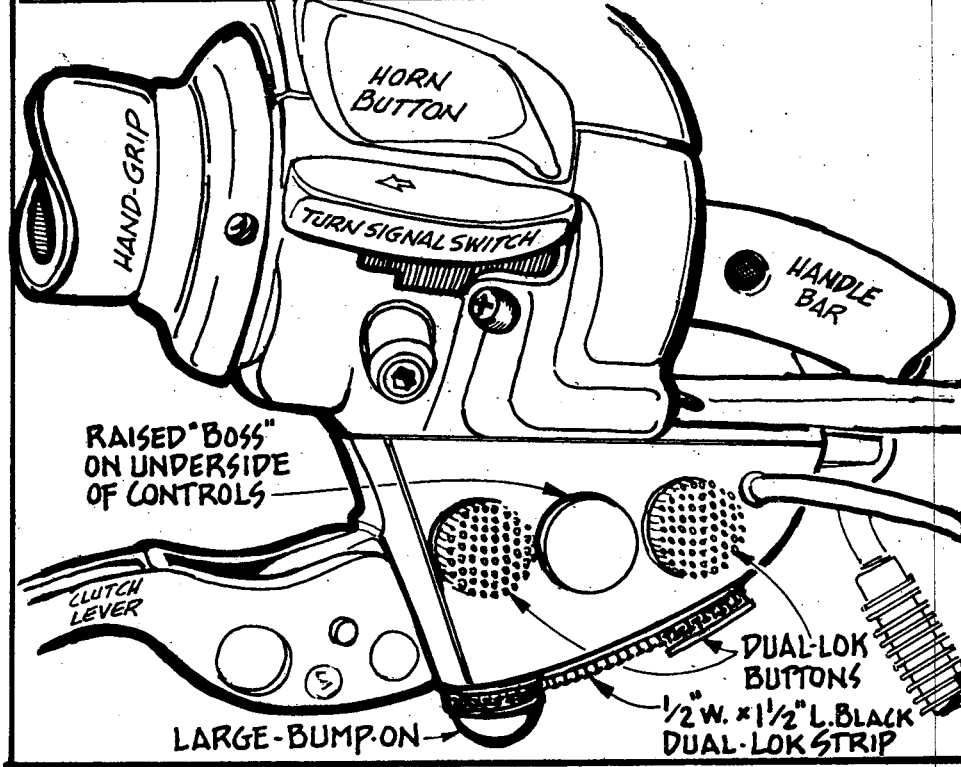

LEADING EDGE of CONTROL HOUSING...

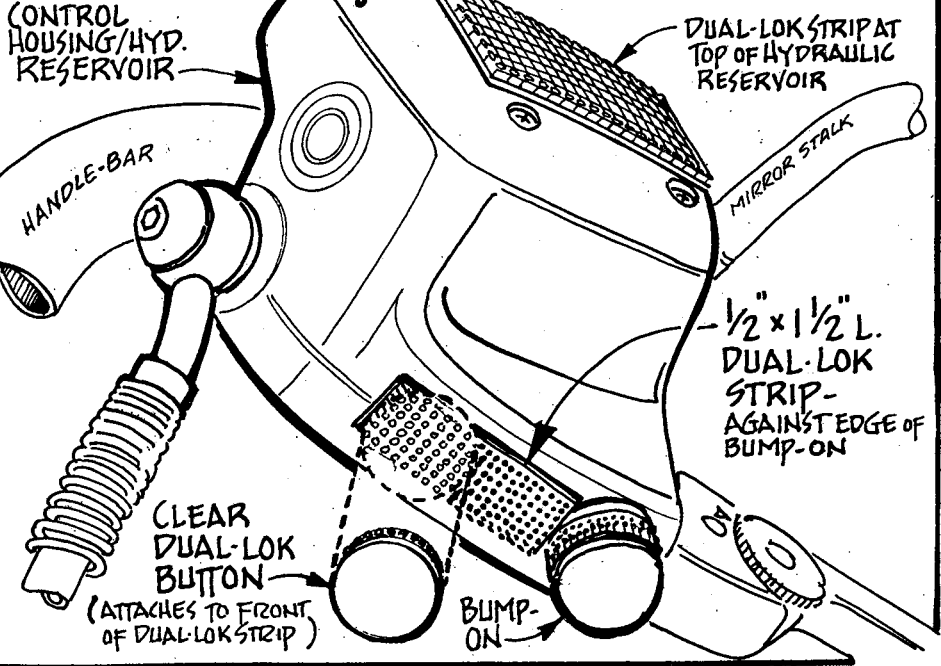

ATTACH DUAL-LOK STRIPS TO MOUNTING FLANGES:

