

Kit 3 | R1200GS/GSA Sport Fairing: Body and Pivot-Arm-Spacer to Bike

Tools and Materials Required:

?Allen Wrench: 5/32"/4 mm.

Bill Of Material	QTY.
Pivot Arm Spacer	1
5 x 35mm., S.S. Allen Head Machine Screw	2
5/8" O.D., S.S./Bonded-Rubber Cushion Washer	2
3/4" O.D. x 1/8" thick Rubber Washer	2

Mounting Overview: FIG. 1.*


1. **Attach** Body and Pivot-Arm-Spacer to stock pivot-arms in sequence shown. NOTE: Put finger on back of nut in pivot arm to keep it in place while threading in mounting screw. Leave screw loose enough to adjust Body Up/Down.

Adjust Body Mounting Position: FIG's 2, 3, & 4*

'05-'07 Models: With Upper brackets "Full-Back": Pull UP on Body until screw stops at Bottom of Slot in Body. Snug up screws enough to hold Body in place but Do Not Tighten Fully. **FIG's 2 & 4.**

'08-on Models: With Upper brackets "Full-Forward": Pull DOWN on Body until screw stops at Top of Slot in Body. Snug up screws enough to hold Body in place but Do Not Tighten Fully. **FIG's 3 & 4.**

FIG. 1

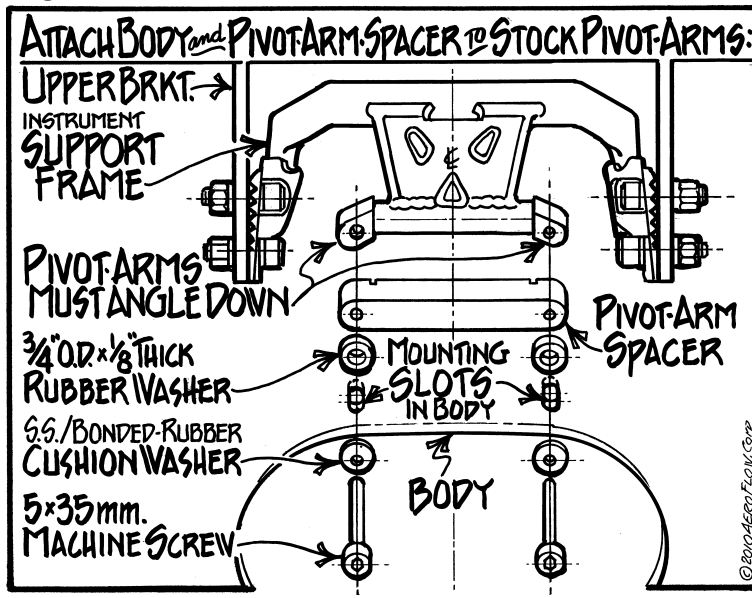

**Touring to Sport Conversion:
Remount Body/Pivot Arm Spacer to
bike. Make adjustments as shown.*

FIG. 2

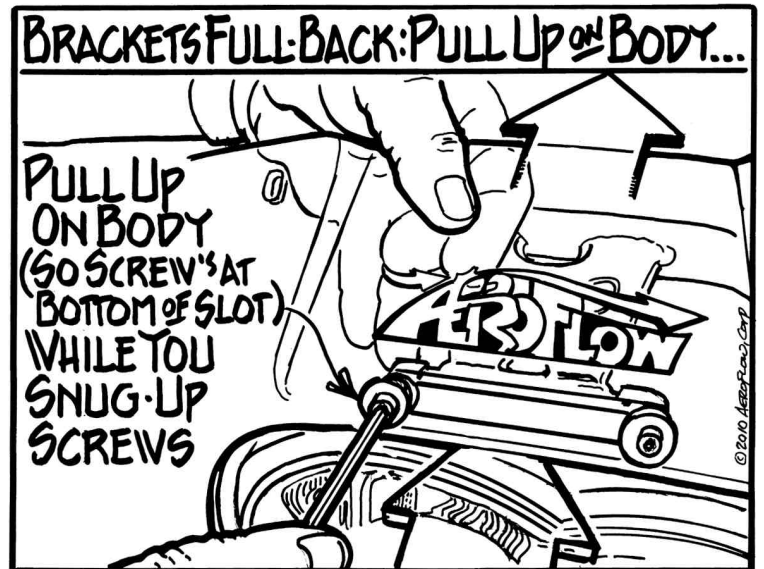


FIG. 3

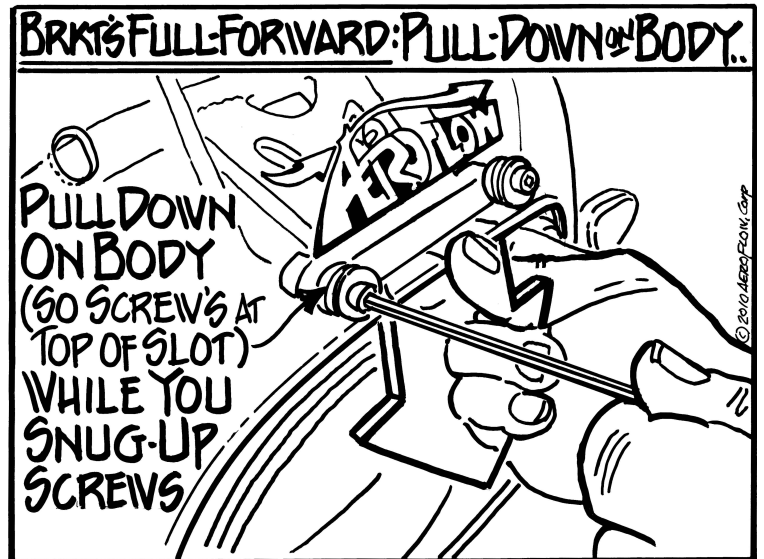


FIG. 4

